





Thank you for purchasing our product. Before installing/operating the product, read the instructions carefully and retain them for future reference.

# ▲ Attention!

• For installation, follow the steps described. Any damage caused by wrong installation shall be imputed to the users.

 
### NOTE

 
Nome procedures must be followed to avoid damages to the product.

**WARNING!** Certain procedure must be followed to avoid damages to yourself, to the vehicle or to others.

## 1 Accessory










**NOTE 1** 1. High-density foam already installed on the filter cover when purchased.

# 2 Installation instruction

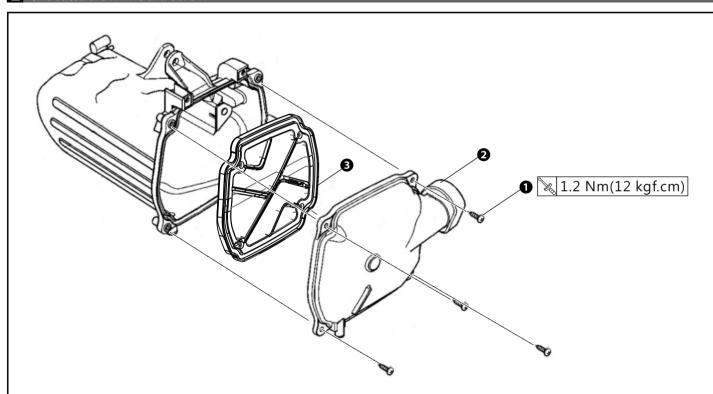

### Proceed as follows

- 1. Use appropriate tools to loosen ① screws x4,② air filter cover and air filter.
- 2. Place the SKOSO air filter (accessory 1) in the correct position, and use appropriate tools to lock the 2 air filter cover and ①screws x3 to the airbox.

**CAUTION!** If the bike falls down or have a fuel leakage, clean up the fuel absorbed by the air filter (warning: Fuel leakage may cause fire during engine start).

# ● To replace filter cartridge, remove ● screws and ● replace the foam (two foams with different densities are available. After replacing the foam, make sure to tie up all necessary screws. ■ CAUTIONI To avoid air leakage, make sure to install the foam properly. ■ 0.5 Nm(5 kgf.cm)

