





Thank you for purchasing the our product. Before installing, please read the instruction carefully and keep it for future reference.

△ ATTENTION!

- Please, follow the step-by-step instructions for proper installation. Any damages caused by faulty installation shall be imputed to the users.
- To avoid a short circuit, do not pull the wires when installing the unit. Do not break or modify the wires either.
- Do not disassemble or change any parts.
- Maintenance and repairs should be executed by our professionals only.
- Mark Meaning:

NOTE You could get the installation details from the information behind the mark.

 \triangle Some processes must be followed to avoid the affection caused by wrong installation.

MARNING! Some processes must be followed to avoid damages to yourself or the public.


CAUTION! Some processes must be followed to avoid the damage to the vehicle.


1 ACCESSORIES




NOTE Contact your local distributor, if the items received in the box are not the same as the items listed above.

2 SPECIFICATIONS

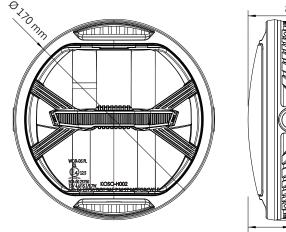

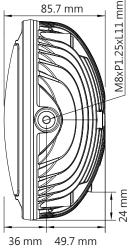

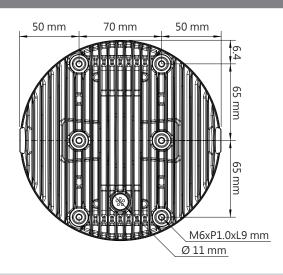

• Effective temperature range	-10 ~ 60 °C

•Standard JIS D 0203


●Effective voltage DC 10 ~ 16 V

●Homologation E-Mark / DOT Approved ●Size Ø 170 X H 85.7 mm

● Size Ø 170 X H 85.7 mn ● Weight About 920 g

NOTE Design and specifications are subject to change without notice!

3 WIRING INSTALLATION INSTRUCTIONS

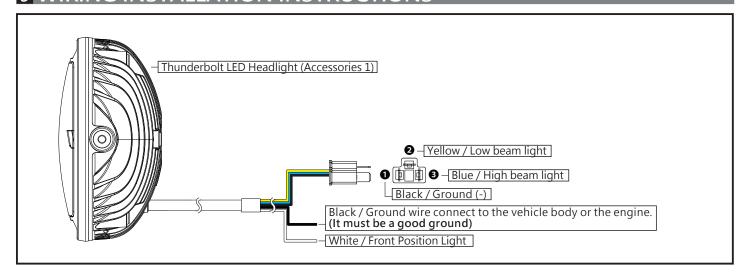

4 TROUBLE SHOOTING

The following situation do not indicate malfunction of the meter. Pleasecheck the following before taking it in for repair.

Trouble	Check item
No LED indicator lighting up.	 ◆Power supply cable may be disconnected. →Check if power supply cable is broken or disconnected. →Check if positive and negative poles are properly connected.

 \times If still can't solve the problems according to the step above, please contact with distributors or us.