

INSTRUCTION



•Thank you for purchasing The Product. Before installation, please read the instruction carefully. We recommend that you store the instruction sheet in a safe place for future reference.

⚠ NOTICE

- •To install, follow the steps as described in the manual. Any damages caused by not following directions voids warranty.
- Correct tools must be used for installation.
- ●Do not modify any parts unless specifically stated in the instruction manual.
- •Interior controller maintenance should be performed by a professional only.

© EXPLANATION OF SYMBOLS

NOTE Read this information carefully regarding the essential features.

<u> Some processes must follow to avoid the affection caused by wrong installation.</u>

ACAUTION! Some processes must follows to avoid the damage to yourself or public.

1-1 ACCESSORIES

 


NOTE Please contact your local distributor if the items received are not the same as the one listed above.

1-2 OPTIONAL ACCESSORIES










NOTE Some of these items may not sell in particular area, for more information, please contact with our local dealer.


2-1 INSTALLATION INSTRUCTION

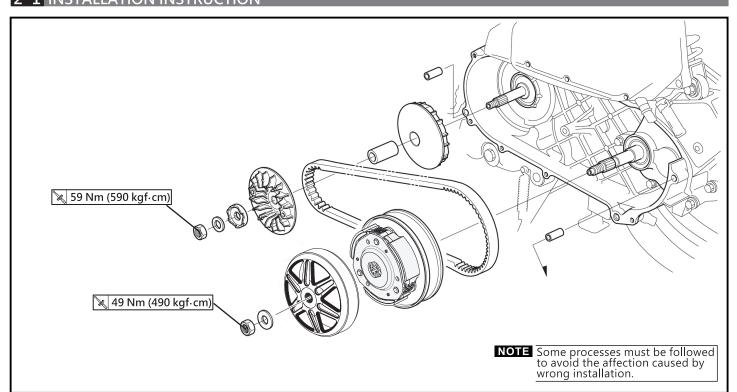



2-2 SPECIFICATIONS

●Size	D121.2 X H 38.2 mm
Clutch weight	231g
 Clutch spring free length 	31.5mm

1. Please using one of below tool to install clutch spring

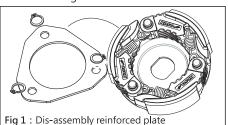

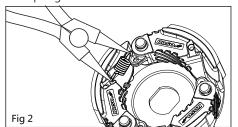


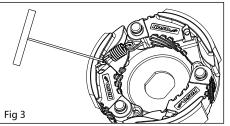

Needle nose Pliers (Fig 1) - Prop and open the spring to install spring into spring fix hole. Spring hook (Fig 2) - fix one side of spring into spring hole. Using spring hook pull spring and fix another side of spring into the position you would like install spring on.

⚠ Please using the spring tool to install clutch spring. Do not over pull spring when install. It may cause spring out of shape and the performance will showing not as expect.


2. Please change spring position per your inquiry.

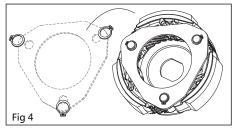

A CAUTION! Pleaseusingoriginalspringwhichincludewithclutchonly.lfusingnon-originalspringcauseclutchdamage.Thewarrantywillbeinvalid.

CAUTION! Do not use this product with clutch bell which has sand blasting inside of it and Be sure the clutch and clutch hosing do not infected by oil when install.

3 POWER CURVE COMPARE CHART

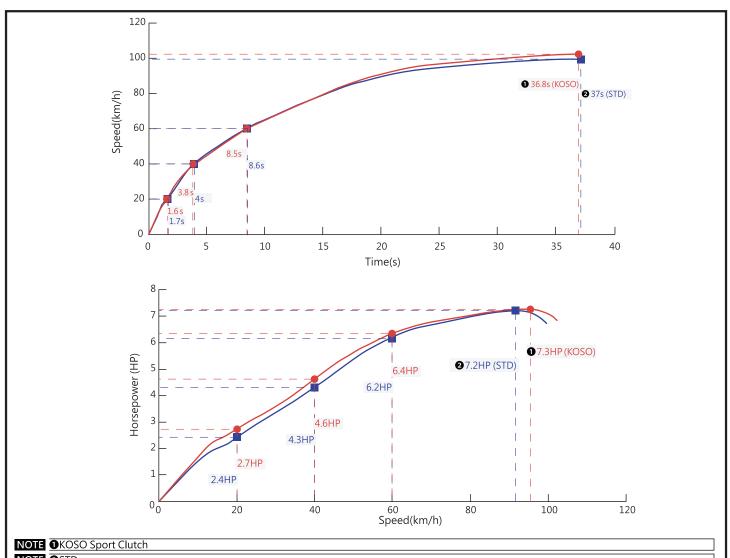

NOTE 2STD

NOTE Test results vary with testing environment and weather. This test chart is for reference only.