



- Thank you for purchasing Hi flow oil pump. Before installation, please read the instruction carefully. We recommend that you store the instruction sheet in a safe place for future reference.

⚠ NOTICE

- To install, follow the steps as described in the manual. Any damages caused by not following directions voids warranty.
- Correct tools must be used for installation.
- Do not modify any parts unless specifically stated in the instruction manual.
- Interior controller maintenance should be performed by a professional only.

◎ SYMBOL NOTE:

🔧 Please using the oil for engine use.

Note Read this information carefully regarding the essential features.

1 Accessory

1 Hi flow oil pump x1



2 M5*L20 Hex head screw x2




3 S7 x1



Note Please make sure that all of the aforementioned accessories are included when you open the kit.


2 Installation instuction

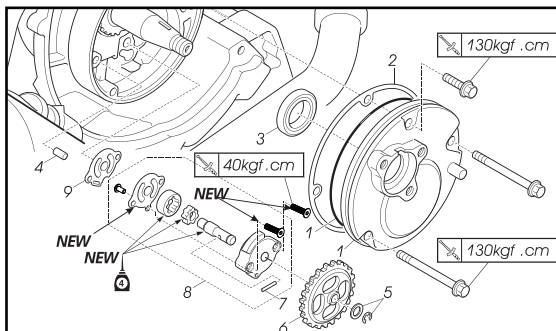

Note Please use 3mm hexagon wrench to install M5 hexagon screw.

Note Please do according to figure in order. Make sure to disassemble the parts in opposite order.

3 Pump flow curve chart

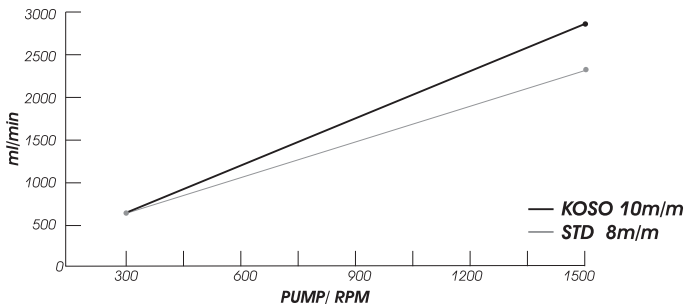

Note $PUMP\ RPM \times 1.5 = ENGINE\ PPM.$

Note Pump flow is 25% more than original one.