



- Thank you for purchasing the our product. Before installing, please read the instruction carefully and keep it for future re ference.

⚠ NOTICE

- To install, follow the steps as described in the manual.
- Any damages caused by not following directions voids warranty.
- Correct tools must be used for installation.
- Do not modify any parts unless specifically stated in the instruction manual.
- Interior controll maintenance should be performed by a professional only.

Ⓢ EXPLANATION OF SYMBOLS

NOTE Read this information carefully regarding the essential features.

⚠ Some processes must be followed to avoid the affection caused by wrong in stallation.

🔧 Denotes the tightening torque value

👉 To smear grease before installation.

1 ACCESSORIES

1 Secondary sliding sheave x1



2 Guide Pin x3




3 Collar x3




NOTE Please contact your local distributor if the items received are not the same as the one listed above.


2 GROOVE ANGLE INSTRUCTION

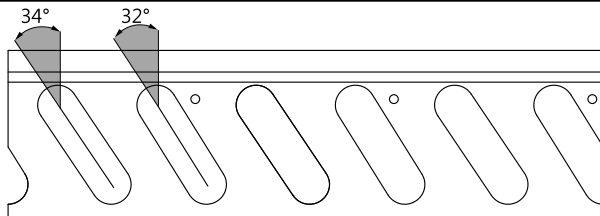

3 ANGLE DEFINE

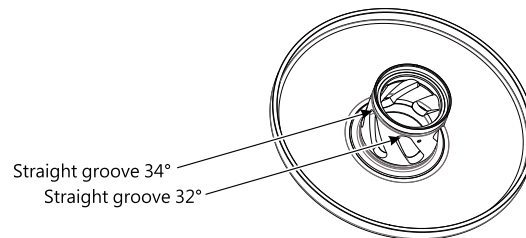

4 PARTS LIST

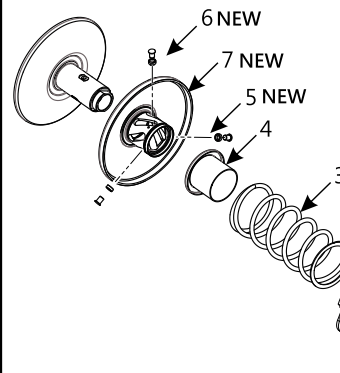

Item Number	Parts	Q'TY
1	Clutch carrier assembly nut	1
2	Clutch	1
3	Spring	1
4	Secondary spring seat	1
5	Collar	3
6	Guide Pin	3
7	Secondary sliding sheave	1



1 ⚡ 55 Nm (550 kgf.cm)

⚠ Be sure to smear grease over the pin and inside of torque cam before install.

⚠ Be sure to clear torque face after smear grease to avoid slipping.

NOTE Please do according to figure in order. Make sure to disassemble the parts in opposite order.

5 POWER CURVE COMPARE CHART

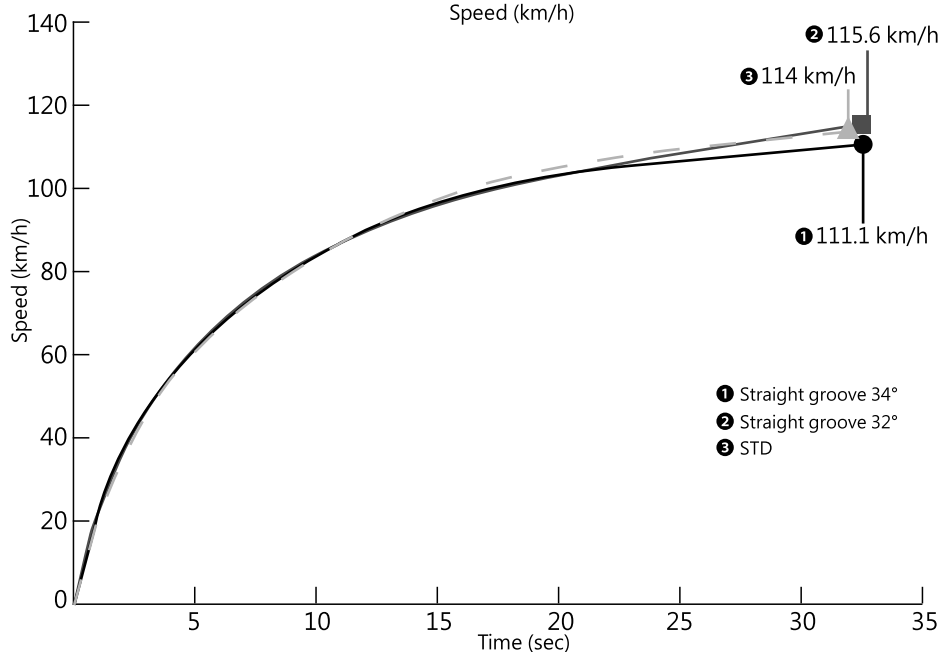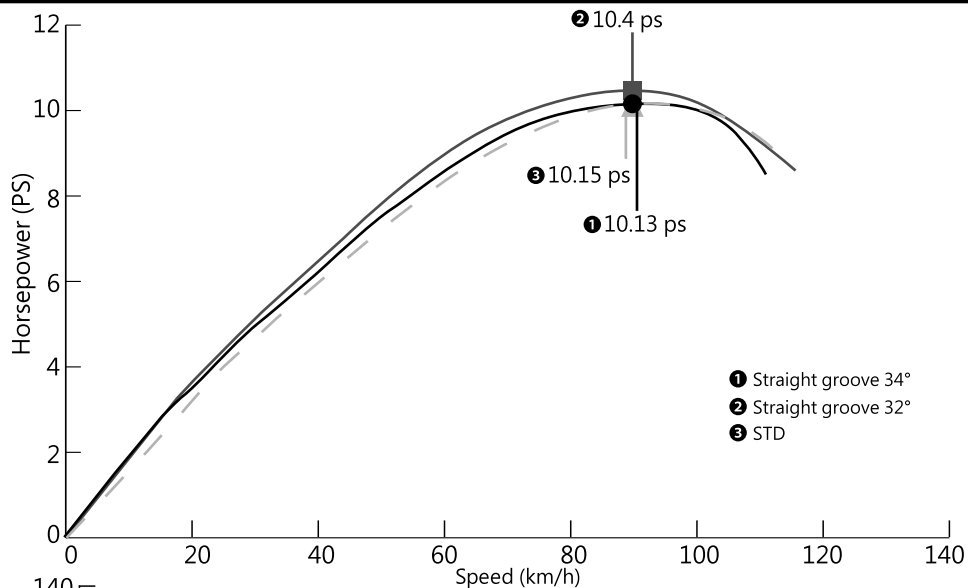

NOTE 1 13.5" Pulley+Roll 11g x6+Secondary sliding sheave 34°.

NOTE 2 13.5" Pulley+Roll 11g x6+Secondary sliding sheave 32°.

NOTE 3 13.5" Pulley+Roll 11g x6+STD Secondary sliding sheave.