





Thank you for purchasing the our product. Before installing, please read the instruction carefully and keep it for future re ference.

♦ NOTICE

- To install, follow the steps as described in the manual. Any damages caused by not following directions voids warranty.
- Correct tools must be used for installation.
- Do not modify any parts unless specifically stated in the instruction manual.
- Interior controller maintenance should be performed by a professional only.
- SYMBOL NOTE:

NOTE Read this information carefully regarding the essential features.

A CAUTION! Some processes must be followed to avoid the damage to the vehicle.

To smear grease before installation.


Denotes the tightening torque value.

1 ACCESSORY



NOTE Please contact your local distributor if the items received are not the same as the one listed above.

2 INSTALLATION INSTRUCTION

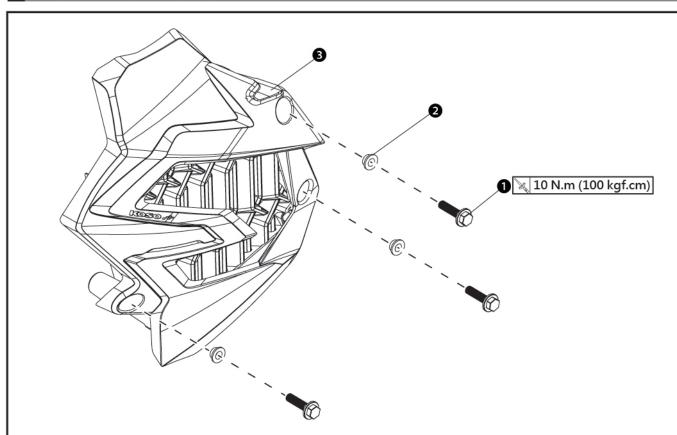

PLEASE PROCEED AS FOLLOWS

- 1. Please use appropriate tools to remove the 10 original fixing screw X3 and the original radiator guard.
- 2. Remove the ② original screw bushing X3 and install it on the ③ KOSO radiator guard (Accessory 1).
- 3. Please use appropriate tools to install the 3 KOSO radiator guard on the vehicle for completion.