



- Thank you for purchasing AERODYNAMIC WING KIT adapter Kit.
- Before Installing please read the instruction carefully and retain them for future reference.

⚠ Notice

- Any damages caused by faulty installation shall be imputed to the users.
- Correct tools must be used for installation.
- Do not modify any parts unless it is specifically stated in the instructions.
- Maintenance and repairs should be executed by a professional only.

◎ MARK MEANING:


NOTE You could get the installation details from the information behind the mark.

⚠ Some processes must be followed to avoid the affection caused by wrong installation.

⚠ WARNING! Some processes must be followed to avoid damages to yourself or the public.

⚠ CAUTION! Some processes must be followed to avoid the damage to the vehicle.

1 ACCESSORY

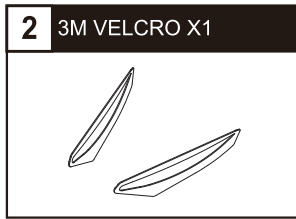

NOTE Please contact your local distributor if the items received are not the same as the ones listed above.

2 INSTALLATION INSTRUCTIONS

Please proceed as follows

AERODYNAMIC WING KIT - right (Accessory 1)

3M Velcro - right (Accessory 2)

3M Velcro - left (Accessory 2)

AERODYNAMIC WING KIT - left (Accessory 1)



1. Please wipe clean the parts for sticking stickers before sticking it.
2. Stick the 3M velcro (Accessory 2) to the KOSO aerodynamic wing kit (Accessory 1).
3. Stick the KOSE aerodynamic wing kit (Accessory 1) to the vehicle.

NOTE We suggest adjusting the aerodynamic wing kit to the position of your liking before sticking it.