



● Thank you for purchasing our product. Please, read the instructions thoroughly and retain them for future reference.

⚠ NOTICE

- To install, follow the steps as described in the manual. Any damage caused by not following directions voids warranty.
- Correct tools must be used for installation.
- Do not modify any parts unless specifically stated in the instruction manual.
- Installation should only be performed by a professional.

⦿ MARK MEANING:

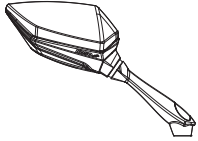
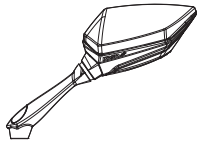


⚠ Some procedures must be followed to avoid damages to the instrument.

⚠ WARNING! Some procedures must be followed to avoid injuries to the user or others.

⚠ CAUTION! Some procedures must be followed to avoid damages to the vehicle.

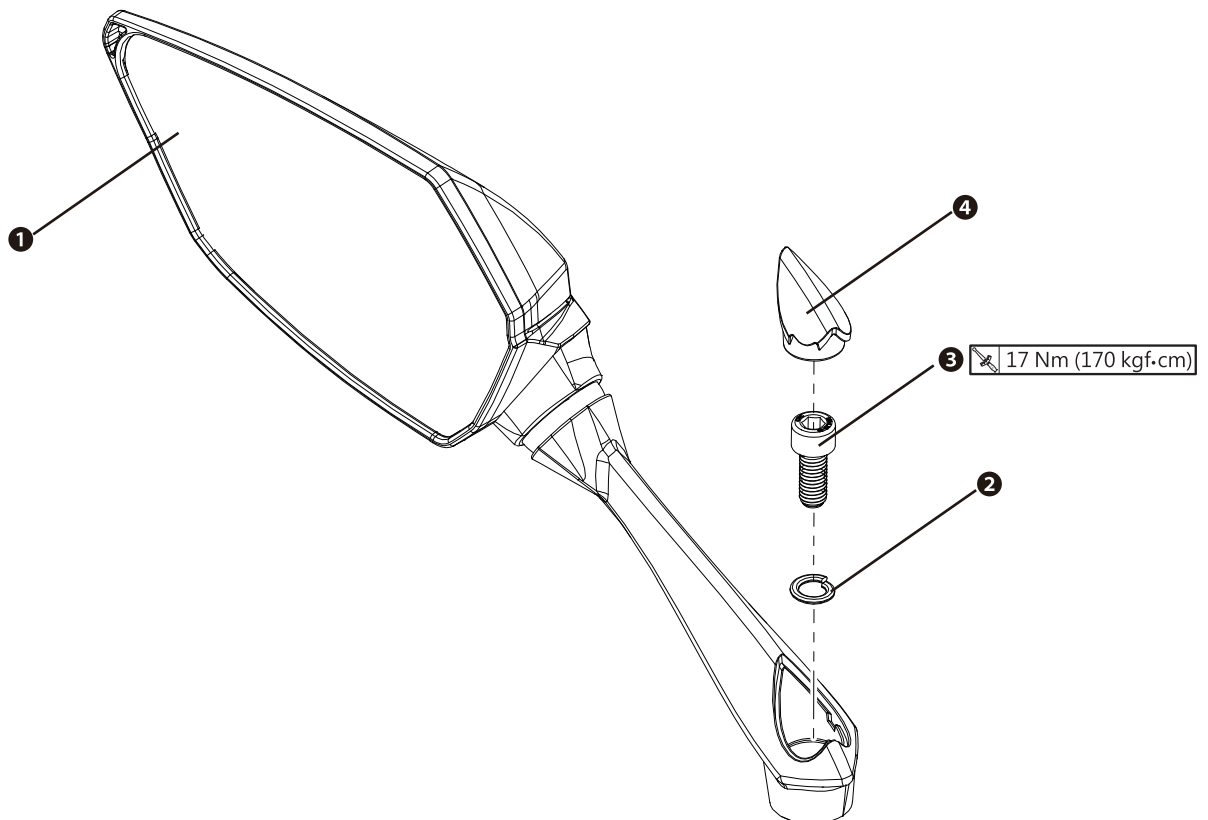
⚡ Denotes the tightening torque value.

1 ACCESSORIES

1 Right side of mirror x1	2 Left side of mirror x1	3 M10x20LxP1.25 Right thread screw x2	4 M10x20LxP1.25 Left thread screw x1	5 Spring washer x2
				

NOTE Please contact the local distributor if the items you open are not the same, with the above-listed one.

2 INSTALLATION INSTRUCTIONS



Please proceed as follows

1. Install the ① rear view mirrors (accessories 1, 2) to the mirror lock holes and adjust them to the appropriate angle.
2. Please place ② spring washers (accessory 5) and ③ screws (accessories 3 or 4) in the screw lock holes.
3. Use a suitable tool to lock the screw to the torque and plug the keyhole plug ④ into the screw hole.

NOTE Regardless of the type of car, but limited to M8 screw, the right rear view mirror depends on the type of vehicle, and some need to be fixed with the left tooth screw (accessory 4).

NOTE Please perform the disassembly work in the order shown. When installing, please proceed in the reverse order of disassembly and refer to the relevant tightening torque values provided.