INSTRUCTION

● *Thank you for purchasing the wheel axle anti-crash guard. Before the installation, please read the instruction sheet carefully.*

⚠ NOTICE

- *To install, follow the steps as described in the manual. Any damages caused by not following directions voids warranty.*
- *Correct tools must be used for installation.*
- *Do not modify any parts unless specifically stated in the instruction manual.*
- *Interior controller maintenance should be performed by a professional only*

Explanation of symbols:

NOTE	*Read information under this heading carefully, it is likely to help you to understand essential steps.*
⚠	*Some processes must follow to avoid the affection caused by wrong installation.*
⚠ **WARNING!**	*Some processes must be followed to avoid damages to yourselt or the public.*
⚠ **AUTION!**	*Some processes must follows to avoid the damage to yourself or public.*
INSTALLATION CAUTION!	*Make sure all screws are tightened properly before starting the engine.*
READ CAREFULLY !	*If any information dealt with in the manual remains unclear seek professional assistance.*


1 Accessories

1 Upper cap X2	2 Seat X2	3 O-ring X2	4 M10 washe X2
			

5 M10 nut x2	6 M12 nut x2
	

NOTE *Please contact your local distributor if the items included in the delivery are different from the ones listed above.*

2 Installation instructions

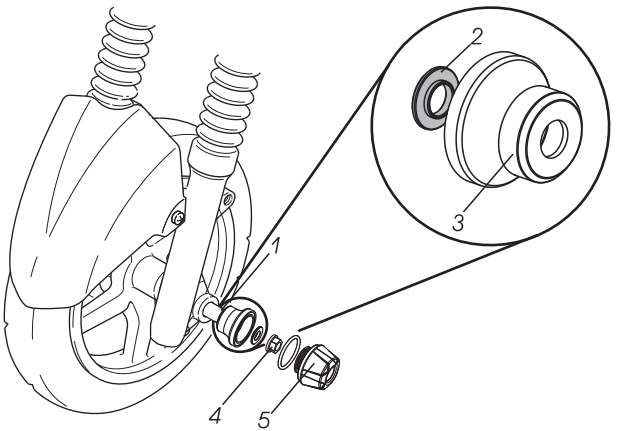

PLEASE INSTALL STEP BY STEP AS FOLLOW INSTRUCTION

1. Before installing this product, remove the nut of front-axle core first.

NOTE *Remove the nut and take out the front-axle core, ready for installing the Front Axle Fall-Proof Ball.*

2.M10 washer X1 (Accessory 4).

⚠ **WARNING!** *If the front axle size is M12, no need to install the M10 washer.*

3.The Seat of Front Axle Fall-Proof Ball X1(Accessory 2).

⚠ **AUTION!** *Please put the O-ring (Accessory 3) into the bottom of the Fall-Prooft ball (Accessory 2) before installing.*

4.The M10 nut X1 (Accessory 5).

5.The upper cap of Front Axle Fall-Proof Ball X1 (Accessory 1).

⚠ *Front-axle core→sequentially pass through the front-axle core seat →M10 washer→M10 hex nut; after that, lock it onto the Front Axle Fall-Proof Ball by a hand tool. Finally, fasten the upper cap of Front Axle Fall-Proof Ball tight.*